
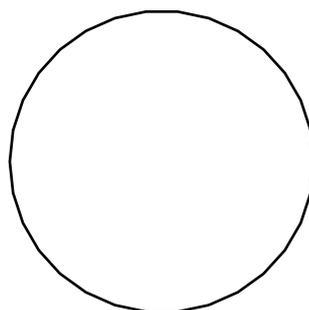
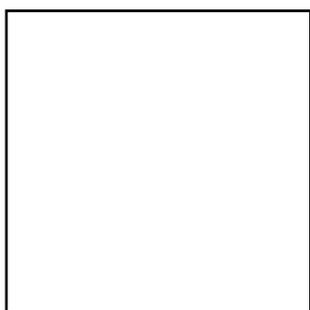
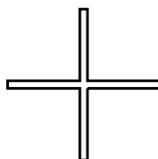


140  
120  
100  
80  
60  
40  
20  
0  
-20  
-40  
-60  
-80  
-100  
-120

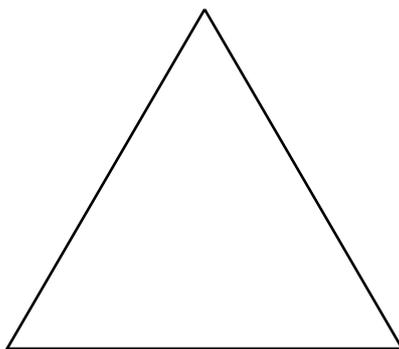

Scale is to calibrate actual printed dimension. Check both X and Y. Measure between tick 0 and last tick

-80

-60

-40

-20

0

20

40

60

80